


**FRESH WATER CIRCULATION DIAGRAM
ALL MODELS EXCEPT M-15
Normal Range 165°F to 195°F**

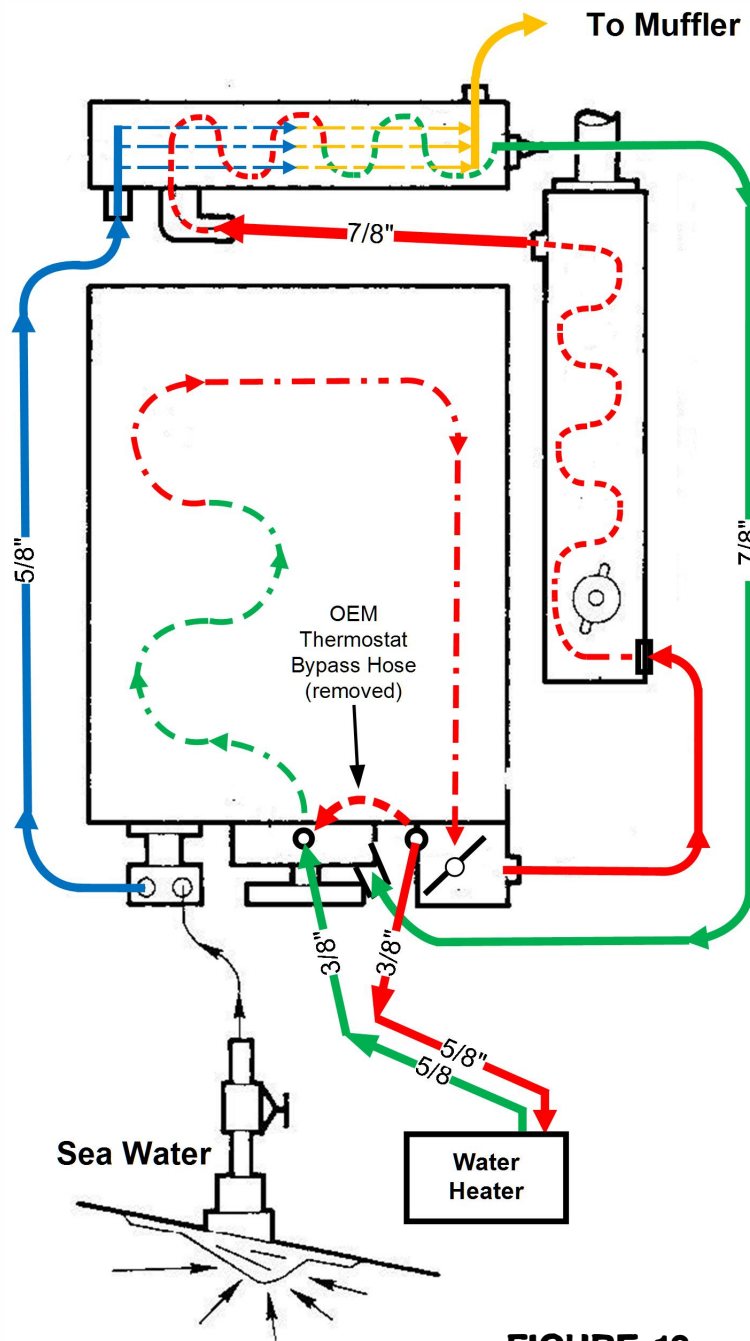

SEA WATER

Rev. 6/7/2018 kwkloeber

FIGURE 13

1. Sea water enters through sea water inlet,
2. Through sea water valve when open,
3. Through sea water pump into heat exchanger to cool fresh water system,
4. From heat exchanger to sea water overboard through exhaust port.