



Original Fluorescent Fixture Wiring (with Ballast)

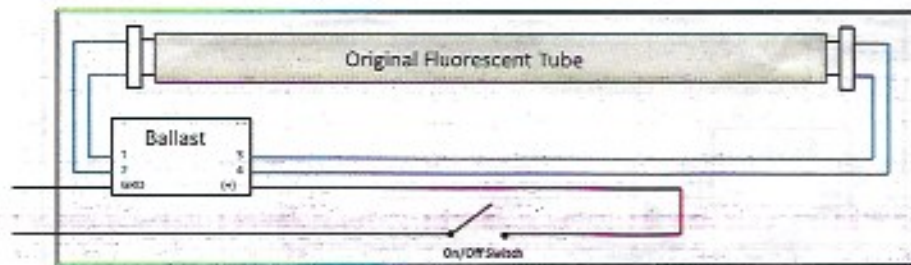

- Step 1: Disconnect power to fixture
- Step 2: Remove original bulb
- Step 3: Remove cover to locate wiring and ballast
- Step 4: Confirm switch is located separately from ballast

Marineborn LED Lighting

Cut wires as shown. The ballast and two of the existing wires are no longer necessary

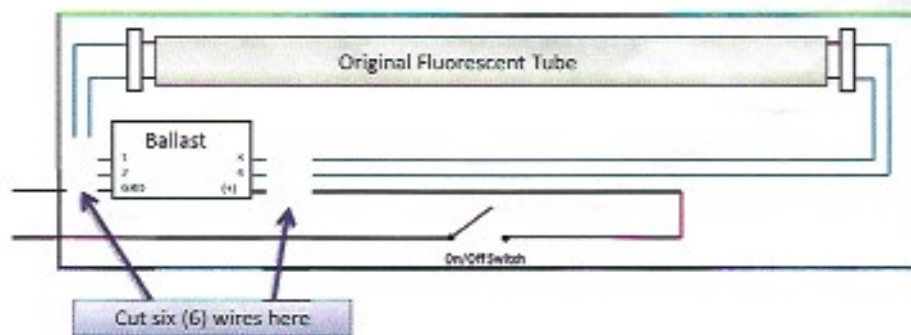

Step 5: Cut the six (6) wires as close to the ballast as possible